





INSTALLER/CONFIGURATION MENU

Press the Menu button for at least 5 seconds. The display will show item #1 in the table below. Press Menu to advance to the next menu item. Press  or  to change a menu item.


INSTALLER/CONFIGURATION MENU						
MENU REF.	HP	SS	PRESS BUTTON	DISPLAYED (FACTORY DEFAULT)	Press  or  to select from listed options	COMMENTS
1	1		MENU	On (Cool O)	Heat b On	Reversing Valve Output (Heat Pump switch must be in the Heat Pump HP position)
2	2	1	MENU	P (2)	P 3, P 0	Selectable Programs Per Week (For programmable thermostat only)
3	3	2	MENU	Cool Saving CS (OFF)	Cool Saving CS On	Select Cool Savings on or off
				CS (3)	6, 5, 4, 2, 1	Selects Cool Savings value 1 (low) to 6 (high)
4	4	3	MENU	E (On)	E OFF	Selects Energy Management Recovery (EMR) on or off
5		4	MENU	CR Heat (ME)	FA, SL	Adjustable Anticipation (Heat) (only when heat pump switch is at the SS position)
6		5	MENU	CR Cool (FA)	SL	Adjustable Anticipation (Cool) (only when heat pump switch is at the SS position)
7	5		MENU	CR Heat Pump (FA)	SL	Adjustable Anticipation (Heat Pump) (only when heat pump switch is at the HP position)
8	6	6	MENU	CL (OFF)	CL On	Compressor Lockout Time
9	7	7	MENU	Auto Heat Cool Off	Heat Cool Off, Heat Off with Fan icon, Heat Off without Fan icon, Cool Off, Auto Off	System Mode Configuration with Automatic Changeover
				Cool Off Heat	Heat Off with Fan icon, Heat Off without Fan icon, Cool Off	System Mode Configuration without Automatic Changeover
10	8	8	MENU	L (On)	L OFF	Selects Display Light on or off
11	9	9	MENU	0 HI	1 HI, 2 HI, 3HI, 4 HI, 1 LO, 2 LO, 3 LO, 4 LO	Adjustable Ambient Temperature Display
12	10	10	MENU	F	C	Selects Fahrenheit/Celcius Temperature Display
13	11	11	MENU	Change Filter (OFF)	Change Filter On	Selects Filter Change-out Indicator
				Change Filter 200 h	25 h to 1975 h in 25-hour increment	When on, selects time in 25 hour increments
14	12	12	RUN			Returns to Normal Operation

Single Stage (Gas, Oil, Electric)

RH	RC	W	G	Y	O/B	C
24 V for Heat	24 V for Cool	Heat Relay	Fan Relay	Compressor Relay	3-wire zone valve	24 V Common

Single Stage Heat Pump (No Auxiliary Heat)

RH	RC	W	G	Y	O/B	C
24 V for Heat	24 V for Cool	Heat Relay (with jumper to Y)	Fan Relay	Compressor Relay (with jumper to W)	Changeover Relay "O" for Cool, "B" for Heat	24 V Common

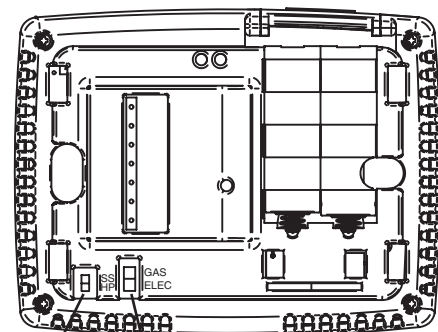

Single Stage/Heat Pump Selection Switch Gas/Electric Switch